



Tools & Material Required

Allen key -	12mm
Adjustable	Spanner

Key	Component	Qty
Α	Manual Body (flow)	1
В	Manual Body (return)	1
С	Nut	2
D	Valve Tail (1/2" BSP)	2
E	Compression Fitting (15mm)	2

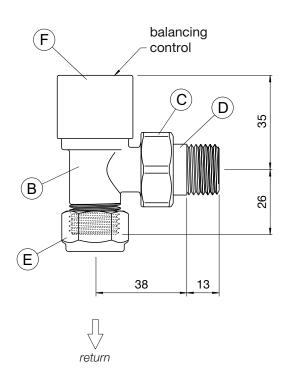

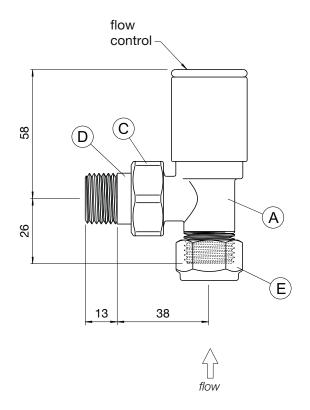

Fitting Instructions

Fit valve tails (D) to radiator using 12mm Allen key, ensuring nut (C) is in place. Note: over-tightening of valve tails may cause damage to surface finish of radiator connections. Do not use grips. Loosen compression fittings (E) and apply valve bodies (A) & (B) to 15mm pipe tails. Install radiator onto bracket mountings and tighten valve tails (D) onto valve bodies (A) & (B). Tighten compression fittings (E).

After filling and venting radiator, remove cap (F) and adjust balancing control to balance radiator.





Registered in England: 2296696